


Manual for: SPP Z3



General principles of the assembly


① Preparation of the grommets

- Remove the anti-deformation support ( only if you use the cable)

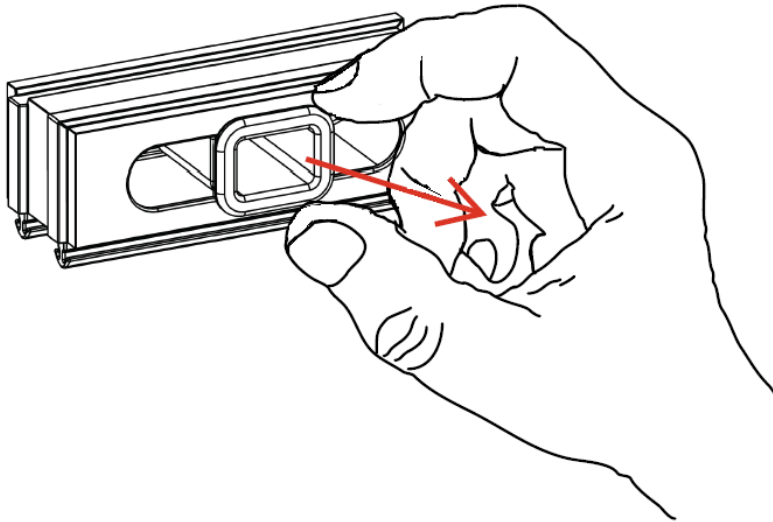


② Cutting for flat cable

- Check the dimensions of the flat cable

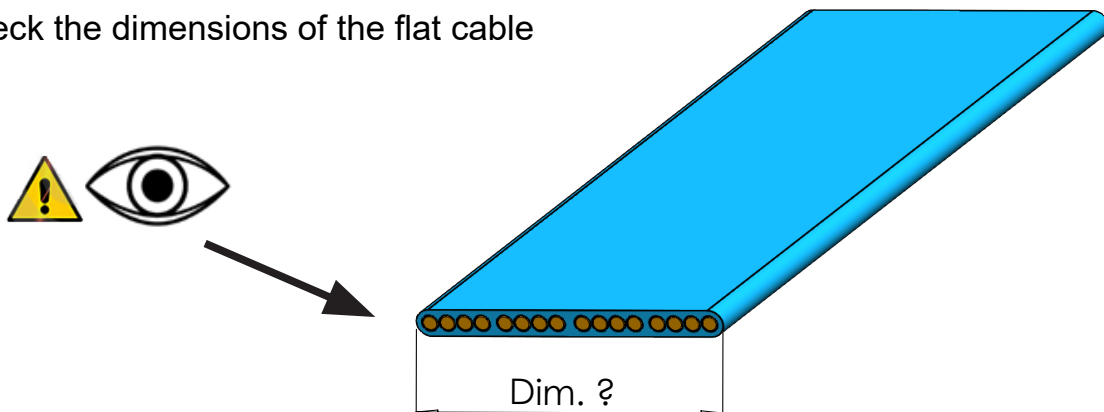


- Make a cut equal to half the width of the flat cable

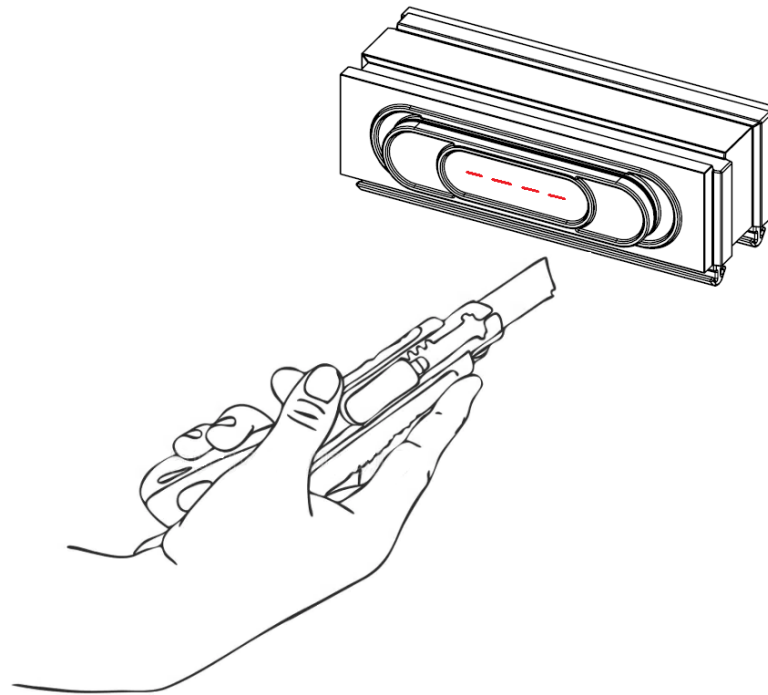


③ Cable insertion

- Push-through insertion

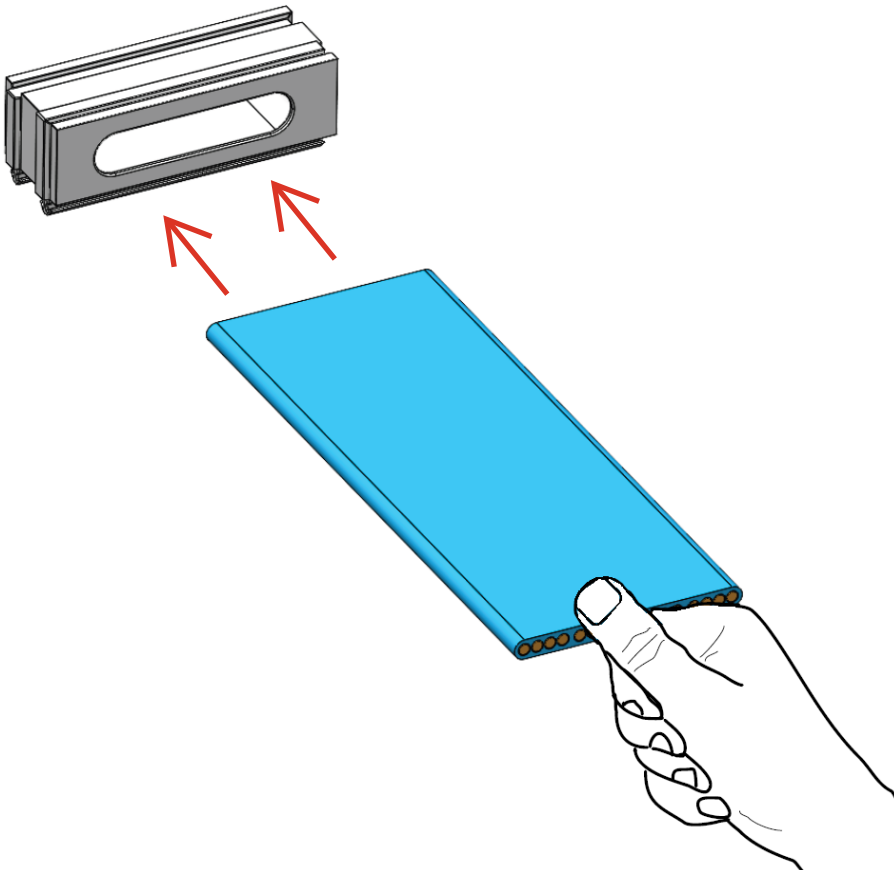




-Ensure that the grommet's membrane is correctly positioned and in full contact with the cable.

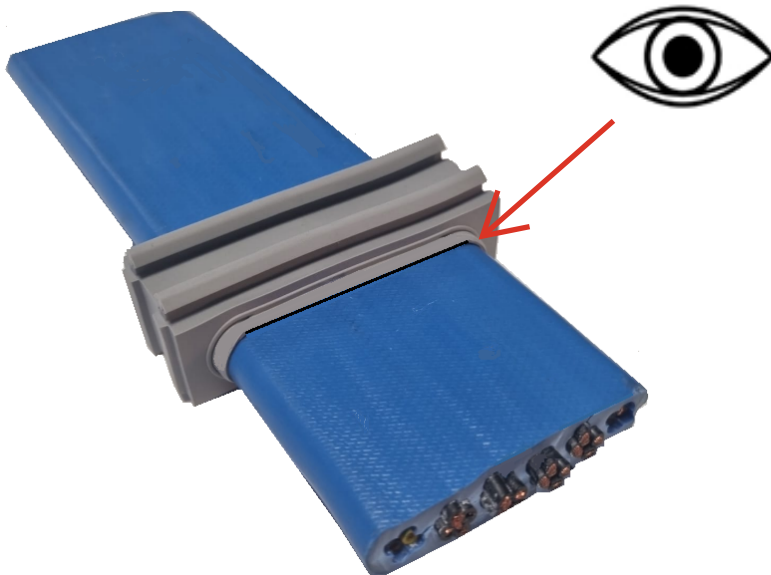

④ Grommet assembly

-Place the grommets into the selected frame.
(See the frame instructions for correct assembly.)

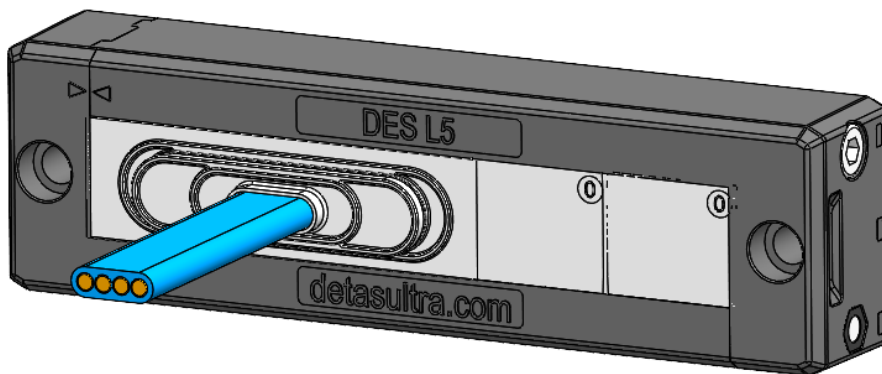

Note:

- Suitable for flat cables up to 60 mm wide.
- No special frames required, compatible with all DES family frames.
For frames other than L2, L3, L4 and L5, if two grommets are installed one on top of the other, the upper grommet may appear rotated. This is only an aesthetic issue; the functionality remains identical to the lower grommet.
- The SPP Z3 has the same dimensions as three standard SPP grommets.